



Footbaths are frequently the first line defence as part of a biosecurity protocol. The use of foot baths should be mandatory for all farm staff & visitors.

Fill and retain your audit sticker for your records


HOW TO USE



- 1 Position footbath on a solid level floor (ideally concrete) near a suitable wall. Ensure a separate water supply close at hand to clean the footwear of soil and organic material prior to disinfection.



- 2 On level ground, prop the bath against a wall to achieve an angle of 45 degrees (as illustrated) and lift the lid.

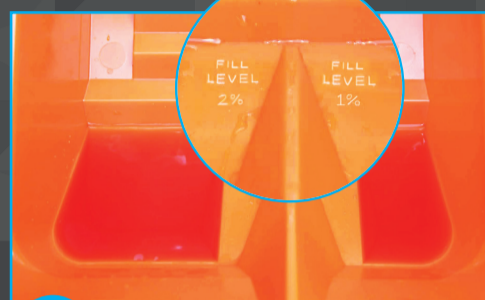

- 3 Carefully pour concentrated disinfectant into the appropriate internal measuring chamber, or chambers. See below.



- 4 Lower footbath so that the base is flat on the floor.



- 5 Fill footbath with clean water to final fill line (15 litres). Swirl bath contents to mix disinfectant.



- 6 Complete an audit sticker and apply to front of the footbath. Mark each use of the footbath and replace after 15 uses, keep the audit sticker as your biosecurity record



- 7 Keep lid closed when not in use to maintain efficacy by keeping contents clean, reducing evaporation or dilution.



- 8 Dispose of used contents responsibly and in accordance with the disinfectant instructions.

Fill the 1% chamber for 1% concentration (half fill for 0.5% concentration).
Fill the 2% chamber for 2% concentration or fill both 1% and 2% chambers for 3% concentration.
When using a jug to measure, fill to 900ml for 6% dilution and 1.5 litres for 10% dilution.

FOOTWEAR DISINFECTION



- Disinfection is only effective after thorough cleaning – remove excess soil and organic matter before dipping footwear.
- Replace contents of the BootDippers bath after 15 uses or more frequently if the disinfectant becomes heavily soiled.

Remember:
Footbaths are for disinfecting and are not designed as a washing point, ensure boots are cleaned prior to disinfecting

COXICUR



	Dilution
Foot & Mouth	1%
Salmonella	2%
E.coli	2%
Coccidiosis	3%
Cryptosporosis	3%
TB	6%
Johne's	6%

TIBICUR



	Dilution
Foot & Mouth	1%
Salmonella	3%
E.coli	3%
TB	10%
Johne's	10%

Use Biocides Safely. Always read the label and product information before use

VIROCUR



	Dilution
Foot & Mouth	1%
Salmonella	3%
E.coli	3%

SCAN ME:
Instructions for use



PROGIENE

0808 178 1010
info@progiene-dairy.com
www.progiene-dairy.com